



CAD files Comblift 542-2,0


File name: DS-542-first-grid_en
Topview first grid

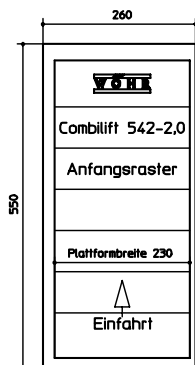

File name: DS-542-middle-grid_en
Topview middle grid

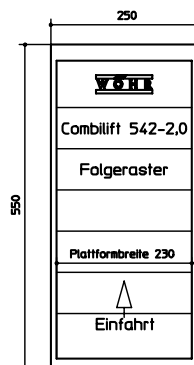


File name: DS-542-end-grid_en
Topview end grid

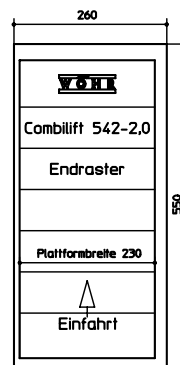


Example Comblift 542 with 3 grids

1 x DS-542-first-grid | 1 x DS-542-middle-grid | 1 x DS-542-end-grid

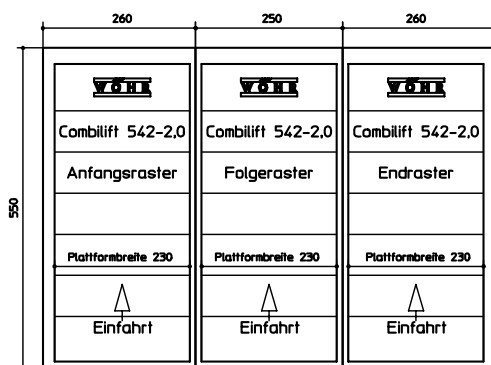

Example Comblift 542 with 6 grids


1 x DS-542-first-grid | 4 x DS-542-middle-grid | 1 x DS-542-end-grid

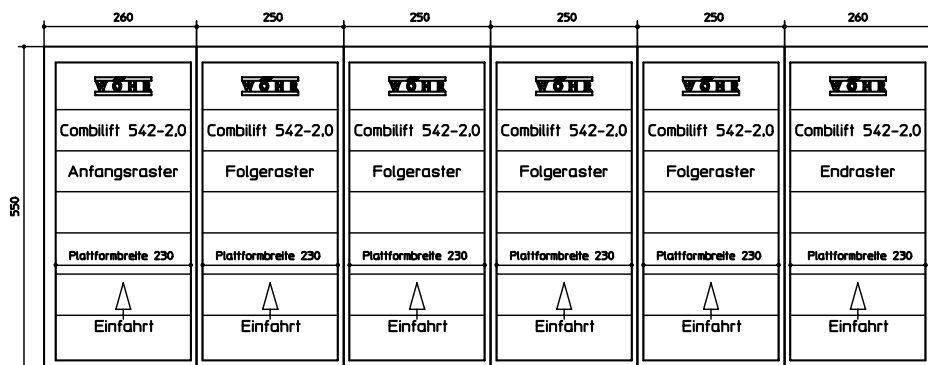

CAD files Comblift 542-2,6


File name: 542-26-Standard_en

Section Comblift 542-2,6 Standard type

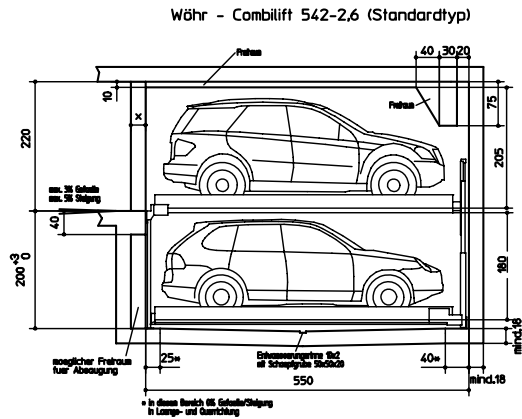


File name: 542-26-Standard_planning_en

Section for planning Comblift 542-2,6 Standard type

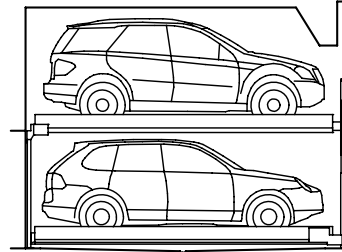


File name: 542-26-Economic_en

Section Comblift 542-2,6 Economic type

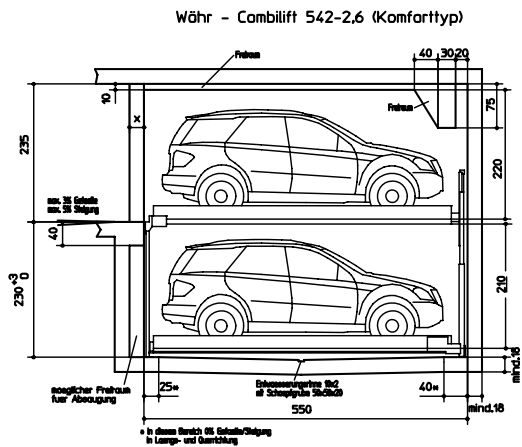

File name: 542-26-Economic_planning_en


Section for planning Comblift 542-2,6 Economic type

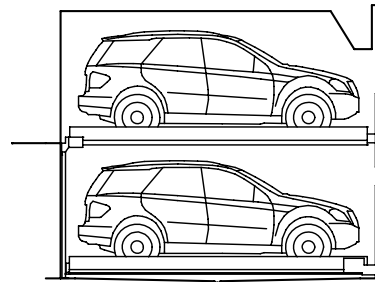

■ CAD files Comblift 542-2,6


File name: 542-26-Comfort_en

Section Comblift 542-2,6 Comfort type

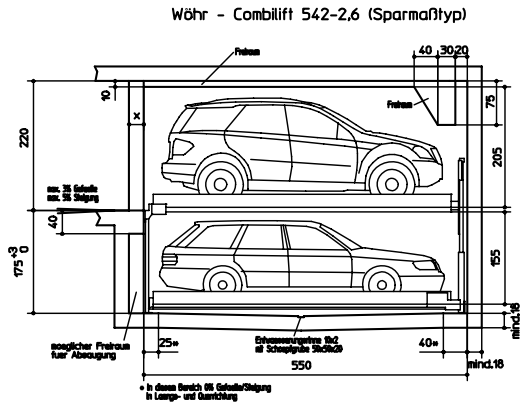


File name: 542-26-Comfort_planning_en

Section for planning Comblift 542-2,6 Comfort type

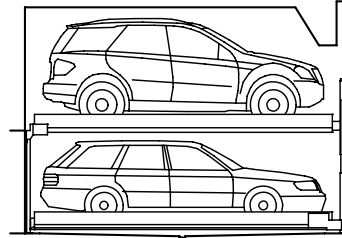


CAD files Combilift 542-2,6


File name: DS-542-26-first-grid_en
Topview first grid

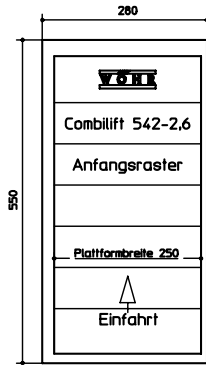

File name: DS-542-26-middle-grid_en
Topview middle grid

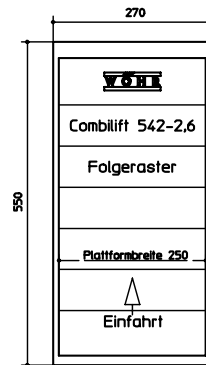


File name: DS-542-26-end-grid_en
Topview end grid

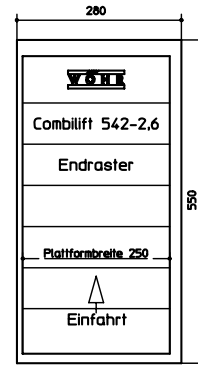

Example Combilift 542-2,6 with 3 grids

1 x DS-542-26-first-grid | 1 x DS-542-26-middle-grid | 1 x DS-542-26-end-grid

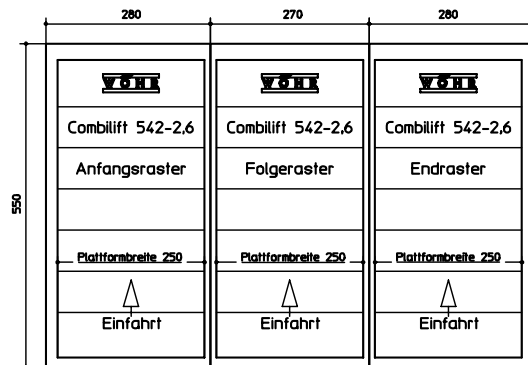

Example Combilift 542-2,6 with 6 grids

1 x DS-542-26-first-grid | 4 x DS-542-26-middle-grid | 1 x DS-542-26-end-grid

